

Front Bumper Wire Mesh Grille Kit



996.1

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

Check to make sure you have all parts listed prior to installation. If anything is missing contact us immediately.

(18) #8 - 3/8" S/S Truss Head Screws - MC93406A192

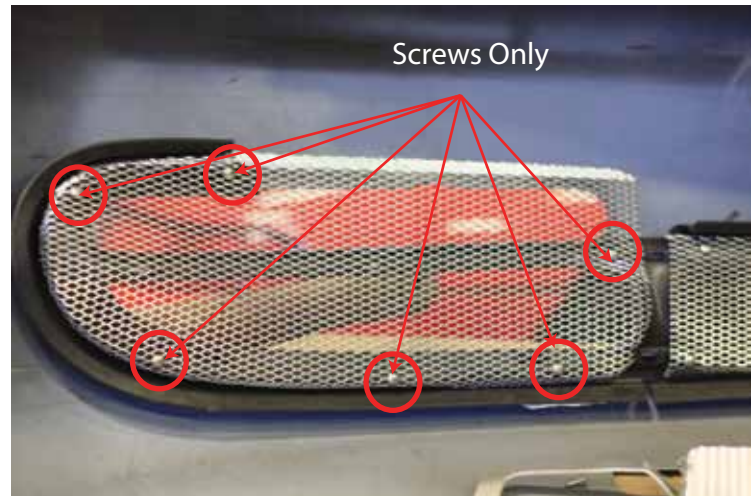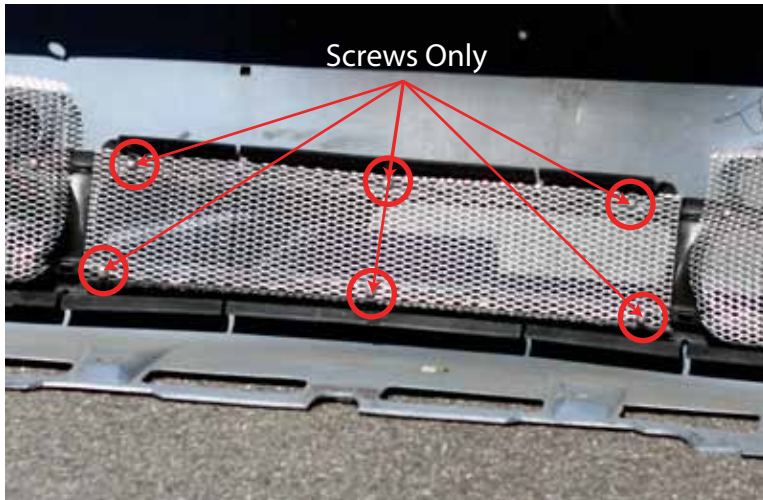

1. Remove bumper cover and flip it over so that the back side is pointing up.
2. Place grilles over the vent housings as shown in Photo 1. If your car is not equipped with a cut out center vent housing, then you must replace it with one or cut your existing housing.
3. If required, manipulate the grilles so that they fit precisely over the vent housings.
4. Install screws in the locations show in photos 1 & 2. NOTE - It is very important to install screws exactly as shown. Before drilling any holes, insure that screws go into the bumper retaining frame and will not protrude into the bumper cover.
5. Reinstall bumper cover.